


Keep With Loader Operator's Manual

PIN ON BALE SPEAR

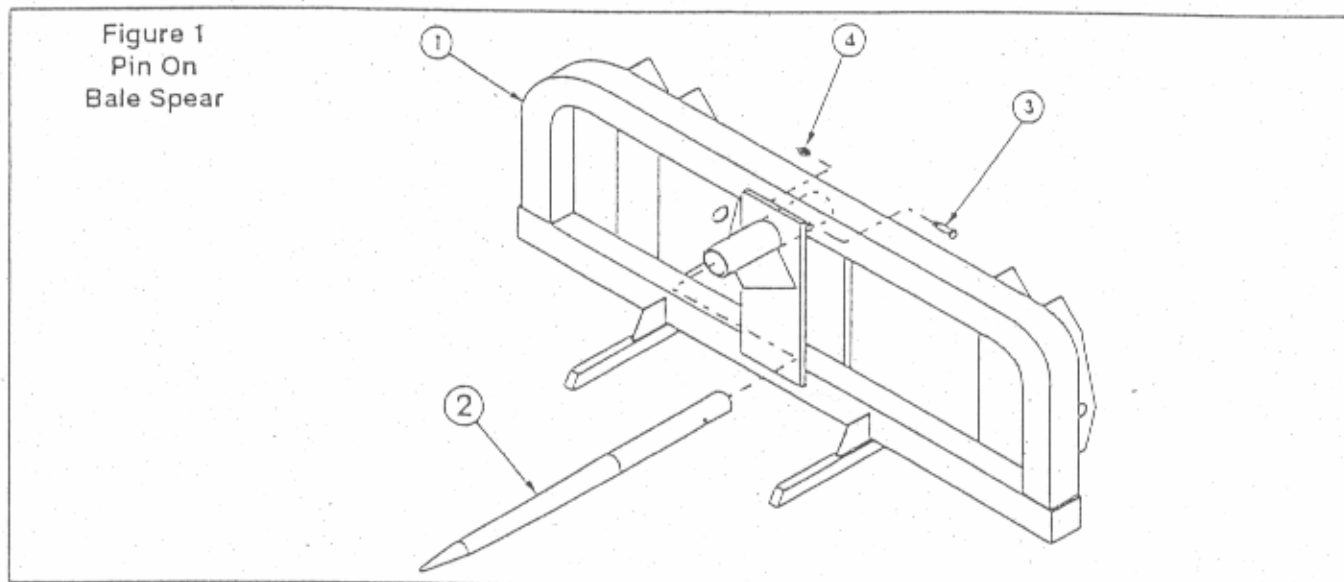

Bale spear can be assembled using tools ordinarily available.

ASSEMBLING ROUND BALE SPEAR

1. Remove banding which secures bale spike (2) to bale spear attachment bracket (1). Temporarily remove 1/2 x 3-1/4 cap screw (3) and lock nut (4).
2. Place bale spike (2) into sleeve of bale spear bracket (1). Fasten spike to bracket using 1/2 x 3-1/4 cap screw (3) and lock nut (4).
3. Attach bale spear to lift boom frame and bucket cylinders with four 1-1/4 pins, 3/8 x 3/4 shoulder bolts and 3/8 lock nuts (supplied with loader).



**WARNING:** Keep bales, bale spear and loader boom clear of overhead lines. Allowing loader boom or any attachment or contents to contact overhead lines may electrify entire tractor and Kill (electrocute) operator.



**WARNING:** Always wear safety glasses when removing or installing bale spear.



**WARNING:** Always use a drift and hammer made of non-sparking material (a shot filled mallet is recommended) to install or remove pins. A steel hammer or drift could generate flying metal fragments and result in injury. Always wear safety glasses when using a hammer to remove or install pins.

PARTS LIST - BALE SPEAR

ITEM	PART NO.	DESCRIPTION	QTY.
1	*	BRACKET, Round Bale Spear	1
2	40906	SPIKE, Round Bale Spear	1
3	G180191	SCREW, Cap, 1/2-13 x 3-1/4	1
4	G9414074	NUT, Lock, 1/2-13	1

\* Bracket assembly not sold as repair part.



# INSTALLATION INSTRUCTIONS