


Keep With Loader Operator's Manual

QUICK ATTACH UNIVERSAL ADAPTER PLATE  
FOR NEW HOLLAND 32LA, 33LA, 52LA & 7310 LOADERS

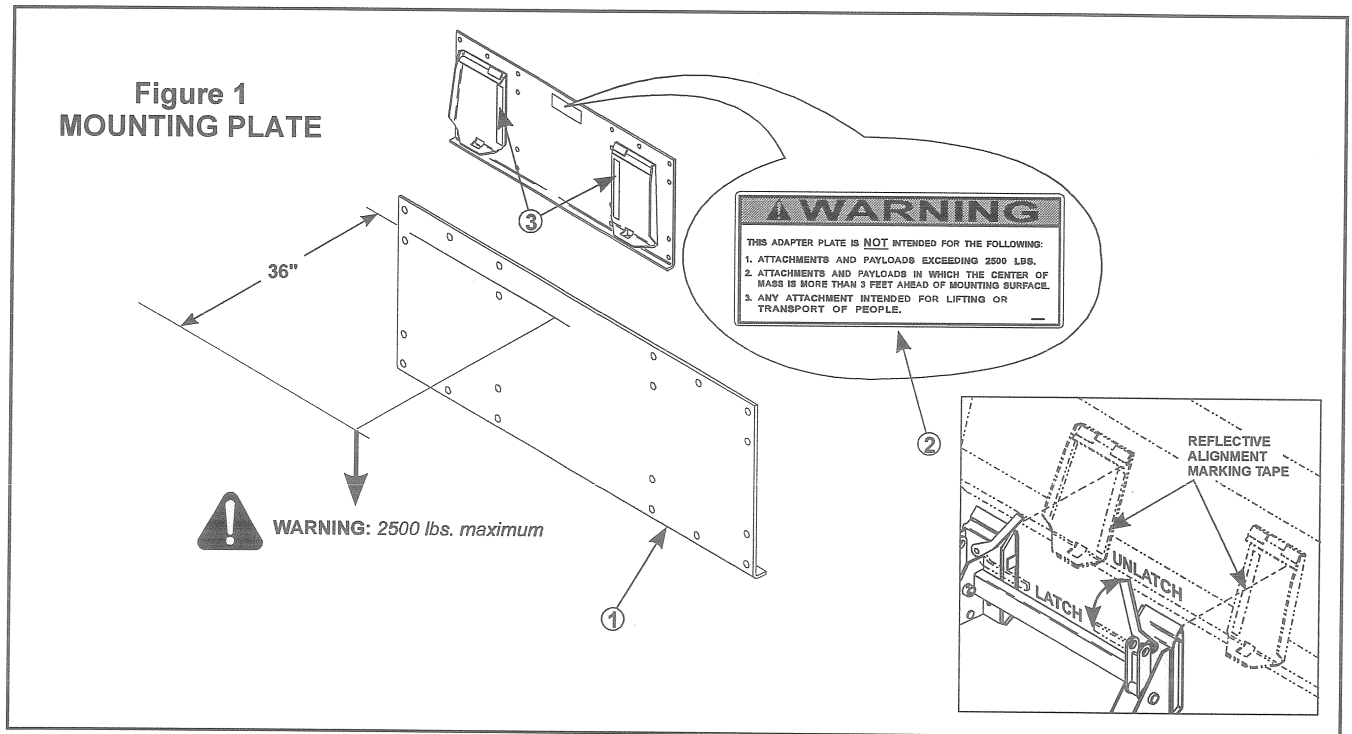

**NOTE:** This Adapter Plate is not intended to be a structural frame for the attachment, only an adapter plate.

**INSTALLING MOUNTING PLATE**

No tools are needed to attach mounting plate to loader.

Mounting plate is designed to be bolted or welded to an existing attachment.

Loader must be equipped with quick attach device (716653006 or 716653016).

**PARTS LIST - MOUNTING PLATE**

ITEM	PART NO.	DESCRIPTION	QTY.
1		MOUNTING PLATE (Not Sold as a Repair Part)	1
2	41591	DECAL, Warning	1
3	46979-1	TAPE, Reflective, Alignment, White, 14"	2



**WARNING:** Do not exceed 2500 lbs. 36 inches in front of mounting plate.

## MOUNTING ATTACHMENT TO LOADER



**WARNING:** To avoid injury during installation of the loader attachment, do not allow bystanders within 10 feet of loader or attachment.

1. Locate tractor and attachment on level ground. Lower boom to rest on the ground. Extend the bucket cylinders slightly, while raising the boom to provide three to five inches of ground clearance, drive the tractor ahead slowly toward the attachment, aligning the loader quick attach device.

**NOTE:** To help guide loader quick attach device into attachment, alignment reflective tape (3) has been applied to back of attachment as shown.

2. While driving the tractor ahead slowly to maintain contact with the attachment, activate the lift cylinders to raise the loader until the quick attach engages under the attachment lip.
3. Then activate bucket cylinders to retract, continuing to roll the attachment back completely.
4. Place tractor in neutral, set parking brake, shut off tractor. Move latch pin handles to latch (down) position.

5. Start tractor activate lift cylinders to raise attachment one or two feet off the ground and extend bucket cylinders to tilt attachment at a slight downward angle, so quick attachment latch pins are visible. Visually inspect the attachment mechanism to verify that the pins are engaged through the latch plate on the back of the attachment.

**NOTE:** If the attachment is not securely attached, follow the instructions for detaching it and repeat the above procedure.

## DETACHING QUICK ATTACH DEVICE



**WARNING:** To avoid injury during installation of the loader attachment, do not allow bystanders within 10 feet of loader or attachment.

1. Locate tractor and loader on level ground.
2. Lower boom arms until the attachment is level and resting on ground.
3. Place tractor in neutral, set parking brake, shut off tractor engine and disengage quick attach device latch pins by moving handles to unlatch position.
4. Start tractor engine, release brake and extend bucket cylinders while slowly backing the tractor away from attachment, until quick attach disengages from attachment.

# INSTALLATION INSTRUCTIONS