


Keep With Loader Manual

## QUICK ATTACH UNIVERSAL MOUNTING PLATE

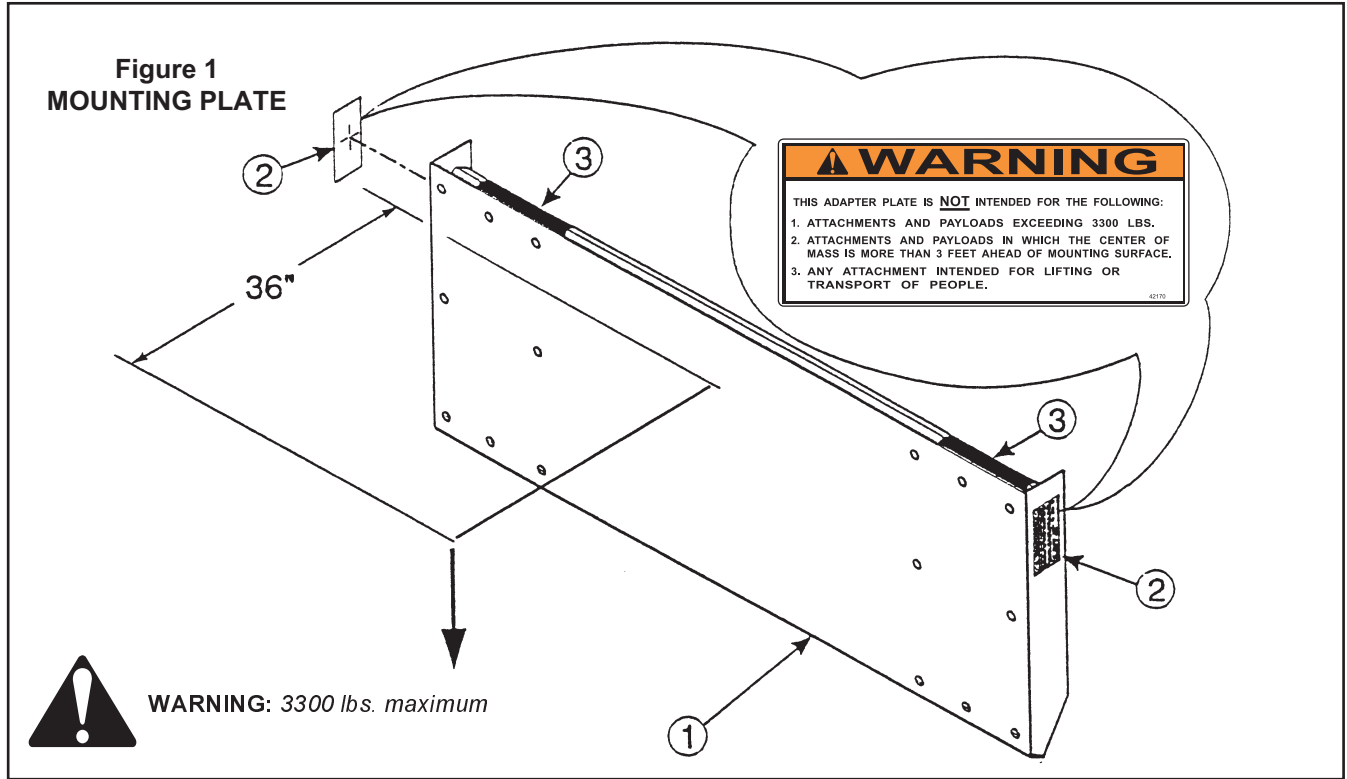

No tools are needed to attach mounting plate to loader.

### INSTALLING MOUNTING PLATE

7312 loader must be equipped with quick attach device 715848001 (2-6303)

Mounting plate is designed to be bolted or welded to an existing attachment. Attach mounting plate to existing attachment in upright position.

### PARTS LIST - MOUNTING PLATE

ITEM	PART NO.	DESCRIPTION	QTY.
1		MOUNTING PLATE (Not Sold as a Repair Part)	1
2	42170	DECAL, Warning	2
3	25820-4	SURFACING, Anti Slip	2




**WARNING:** Do not exceed 3300 lbs. 36 inches in front of mounting plate.

## ATTACHING QUICK ATTACH MOUNTING PLATE



**WARNING:** To avoid injury during attachment or detachment, do not allow bystanders within 10 feet of loader or attachment.

1. Locate tractor and attachment with mounting plate on firm level ground. Lower boom to three to five inches off ground.
2. Disengage latch pins by lifting handles and pulling toward the rear so pins are held out of attachment ears.

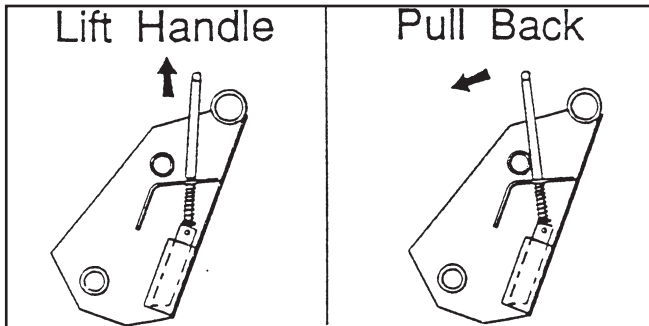

3. Extend bucket cylinders slightly. Making sure loader quick attach bar is parallel to mounting plate, drive tractor ahead very slowly toward mounting plate until quick attach bar touches attachment just below attachment channel.
4. Use lift cylinder to raise loader while activating bucket cylinder to curl quick attach device to engage channel of bucket. Moving tractor forward will assist engagement.

7314, 7411, 7412, & 7413 Loaders- When quick attach bar has fully engaged bucket channel continue to retract bucket cylinder until latch pins engage mounting plate securely.

7312 only- When quick attach bar has fully engaged bucket channel; shut off engine, engage brakes and manually engage bucket quick attach device.

5. Activate lift cylinder to raise mounting plate and extend bucket cylinders to tilt mounting plate at a slight downward

angle, so quick attach device is visible. Visually inspect attachment mechanism to verify that pins are engaged in ears on back of mounting plate.

**NOTE:** If mounting plate is not securely latched, follow instructions for detaching mounting plate and repeat above procedure.


## DETACHING QUICK ATTACH MOUNTING PLATE



**WARNING:** To avoid injury during attachment or detachment, do not allow bystanders within 10 feet of loader or attachment.

**IMPORTANT:** Loader must be equipped with a bucket, bale spear or similar attachment to dismount loader from tractor.

1. Locate tractor and mounting plate attachment on firm level ground.
2. Lower boom arms until mounting plate rests level two to three inches off ground. Shut off tractor engine and set tractor brakes.
3. Disengage latch pins by lifting handles and pulling toward the rear so pins are held out of attachment

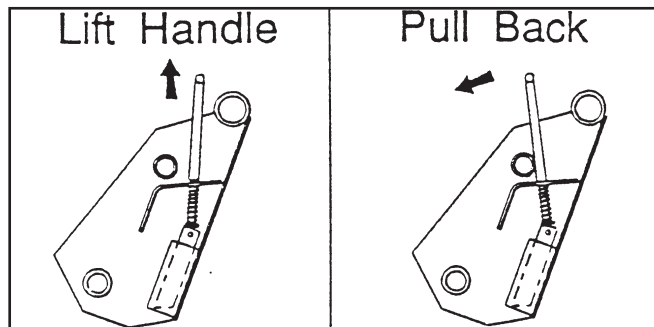

ears .

4. Start tractor engine, release tractor brakes and extend bucket cylinders while slowly backing tractor away from attachment until quick attach bar disengages from attachment channel.

# INSTALLATION INSTRUCTIONS