


Keep With Loader Operator's Manual

QUICK ATTACH UNIVERSAL MOUNTING PLATE

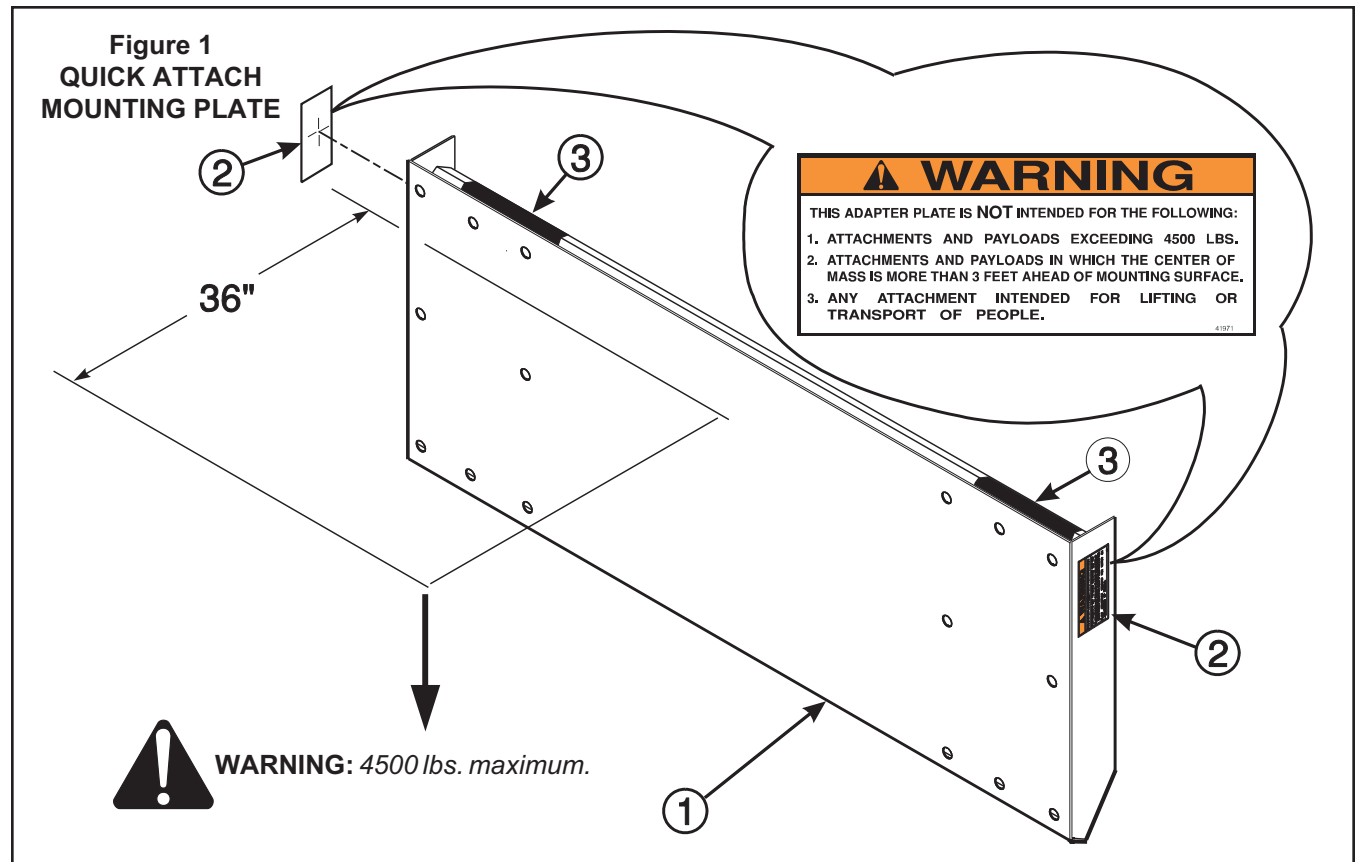

No tools are required to attach mounting plate to loader.

INSTALLING MOUNTING PLATE

Mounting plate is designed to be bolted or welded to an existing attachment. Attach mounting plate to existing attachment in an upright position.

PARTS LIST — MOUNTING PLATE

Item	SMC No.	Part No.	Description	Qty.
1	*	*	MOUNTING PLATE	1
2	41971	SML41971	DECAL, Warning	2
3	25820-4	SML258204	ANTI-SLIP SURFACE	2

**Not sold as separate repair item.*




WARNING: Do not exceed 4500 lbs at or over 36 inches in front of mounting plate.

ATTACHING QUICK ATTACH MOUNTING PLATE

WARNING: To avoid injury during installation or removal, do not allow bystanders within 10 feet of loader or attachment.

1. Locate tractor and attachment on firm, level ground. Lower boom to rest on the ground. Extend tilt cylinders slightly, while raising the boom to provide three to five inches of ground clearance.
2. Set tractor parking brake and shut off engine. Disengage latch pins by lifting handles and pulling them rearward, so latch pins are held in raised position.

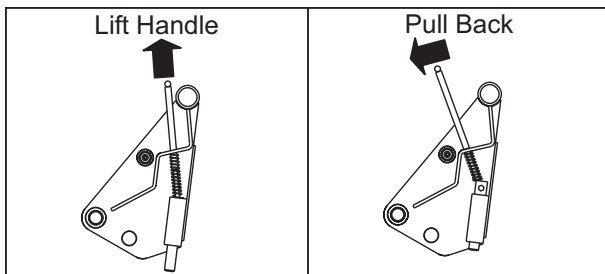

3. Making sure cross tube of quick attach bracket is parallel to attachment frame, drive tractor ahead very slowly toward attachment until cross tube touches attachment just below attachment channel.
4. Lift loader booms slightly to engage cross tube in attachment channel, while simultaneously retracting tilt cylinders to roll attachment back, tripping handles so latch pins engage.
5. Tilt attachment at a slight downward angle so quick attach mechanism is visible. Rest attachment on ground, set tractor parking brake, and shut off engine. Visually inspect quick attach mechanism to verify that pins are fully engaged in attachment ears.

NOTE: If attachment is not securely attached, follow instructions for detaching it and repeat above procedure.


DETACHING QUICK ATTACH MOUNTING PLATE

WARNING: Loader must be equipped with a heavy attachment such as a bucket when it is removed from tractor. Bale spear, pallet fork, or similar attachments are too light to safely counterbalance loader boom arms when loader is dismounted from tractor.



WARNING: To avoid injury during installation or removal of attachment, do not allow bystanders within 10 feet of loader or attachment.

1. Locate tractor and loader on level ground.
2. Lower boom arms until attachment is level and resting on ground. Shut off tractor engine and set tractor brakes.
3. Disengage latch pins by lifting handles and pulling them rearward, so latch pins are held in raised position.

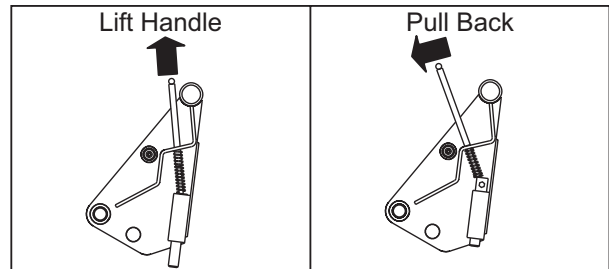

4. Start tractor engine, release brake and extend tilt cylinders while slowly backing tractor away from attachment, until quick attach disengages from attachment.

INSTALLATION INSTRUCTIONS